

LENOXX

BTD200

 
Bluetooth® 300 WATT ENTERTAINMENT SYSTEM

NEW DUAL SYSTEM

BLUETOOTH x2
FM STEREO x2
MICROPHONE INPUTS x2
VOLUME DIALS x2
USB PORTS x2
SD SLOTS x2



Lenoxx Electronics Aust Pty Ltd
www.lenoxx.com.au
Customer Service: 1300666848



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



The lightning flash with the arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of "uninsulated dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

Safety Precautions

Warning: To prevent fire or electric shock, do not expose this appliance to rain or moisture.

IMPORTANT SAFEGUARDS

Caution: Please carefully read all of the following important safeguards to ensure safe operation.

1. Read Instructions:

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions:

The safety and operating instructions should be retained for future reference.

3. Follow Instructions:

All operating instructions should be followed.

4. Heed Warnings:

All warnings on the unit and the operating instructions should be adhered to.

5. Power Source:

The appliance should be connected based on instructions.

6. Heat:

Keep the unit away from heat sources such as radiators, refrigerators, stoves or other appliances that may radiate heat.

7. Non-use Periods:

 
The power cord of the unit should be unplugged from the outlet when you do not use it for a long time.

8. Damage requiring service:

The unit should be repaired by qualified service personnel in the following cases:

- a. The power plug or cable has been damaged;
- b. Objects have fallen or liquid has been spilled on the appliance;
- c. The appliance has been exposed to rain;
- d. The appliance is functioning abnormally.

CONNECTIONS

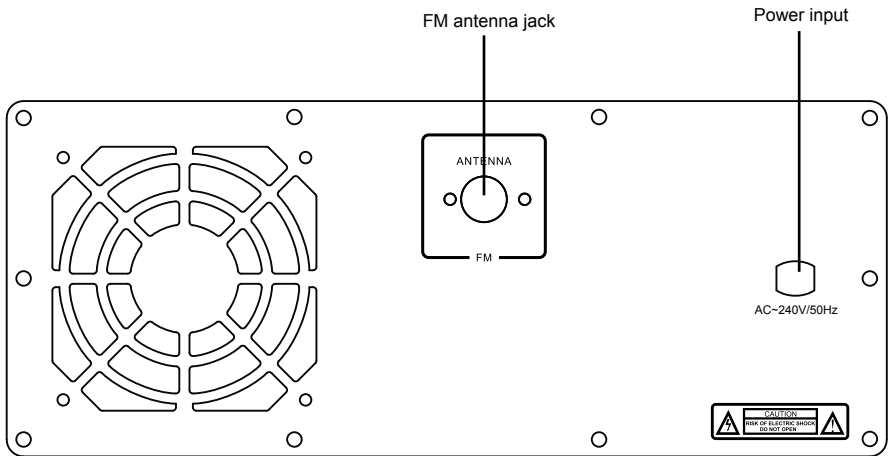

Accessories



REMOTE CONTROL



INSTRUCTION
MANUAL

 


FM ANTENNA




AUDIO CABLE

SYSTEM A

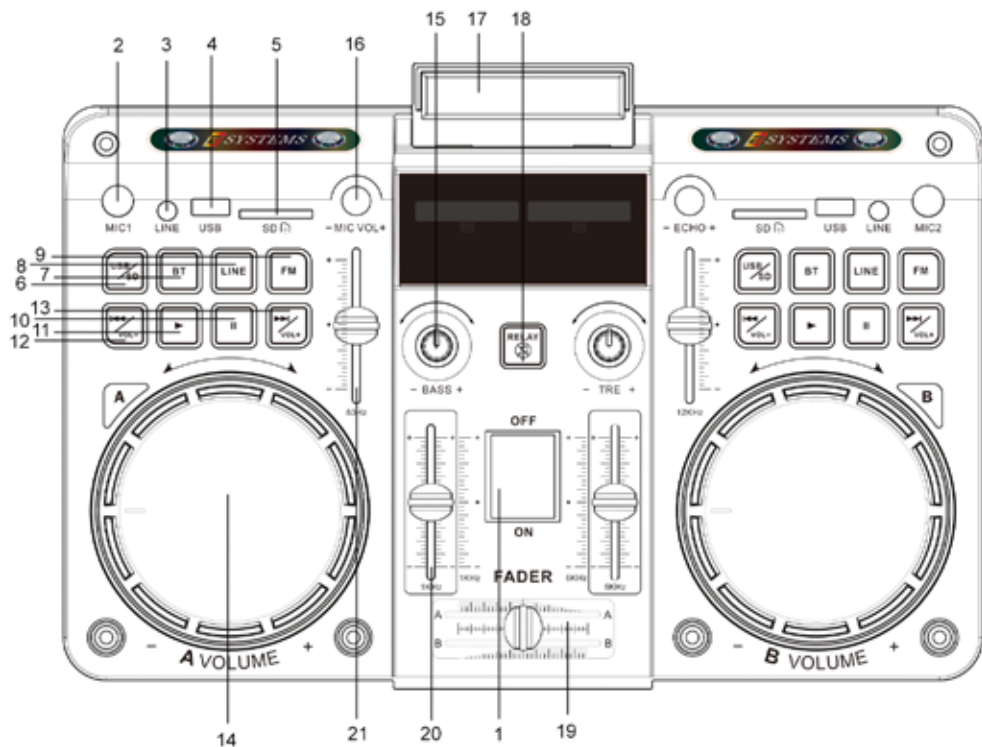


1. Power ON/OFF
2. Microphone1 input slot
3. A System Line input slot
4. A System USB input slot
5. A System SD card input slot
6. A System USB/SD card input key
7. A System BT input key(BT searching name: BTD200 lenoxx A)
8. A System Line input key
9. A System FM input key
10. A System Pause key
11. A System Play key
12. A System Previous key, long press for volume decrease
13. A System next key, long press for volume increase
14. A System volume control
15. BASS increase/weaker knob
16. Microphone volume increase/decrease knob
17. Digital display screen
18. Replay on / off key
19. Fader sliding adjuster
20. Equaliser sliding adjuster
21. Equaliser sliding adjuster

 SYSTEM B

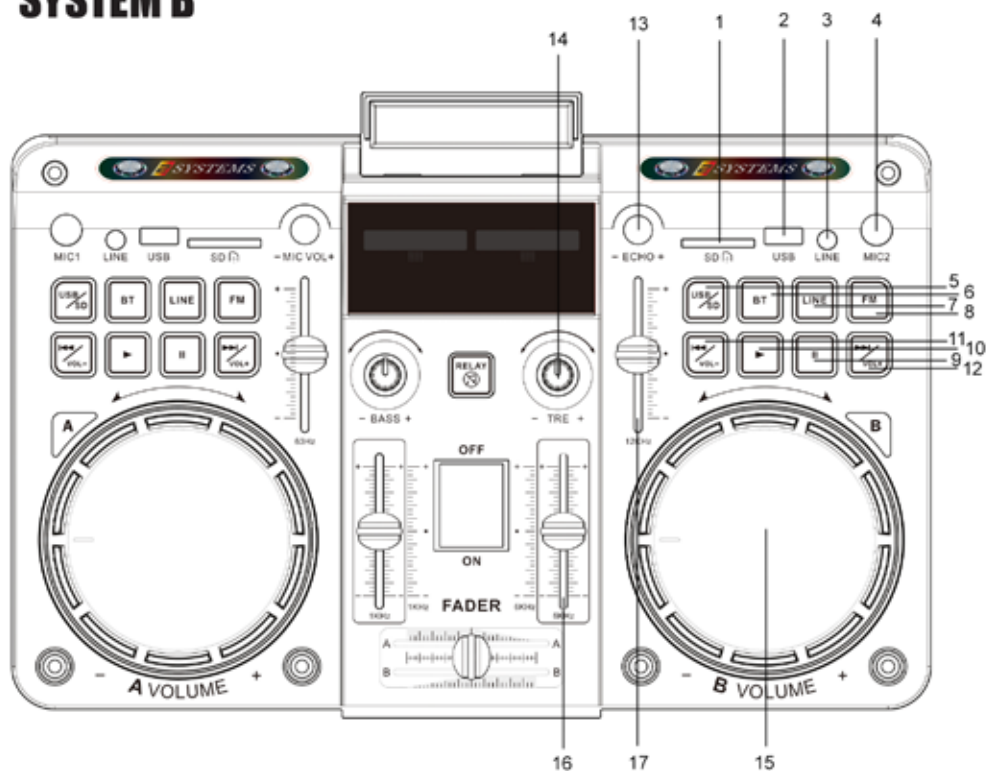

1. B System SD card input slot
2. B System USB input slot
3. B System Line input slot
4. Microphone2 input slot
5. B System USB/SD card input key
6. B System BT input key (BT searching name: BTD200 lenoxx B)
7. B System Line input key
8. B System FM input key
9. B System Pause key
10. B System Play key
11. B System Previous key, long press for volume decrease
12. B System next key, long press for volume increase
13. ECHO weaker/increase knob
14. TRE increase/weaker knob
15. B System volume control
16. Equaliser sliding adjuster
17. Equaliser sliding adjuster

 REMOTE INSTRUCTION

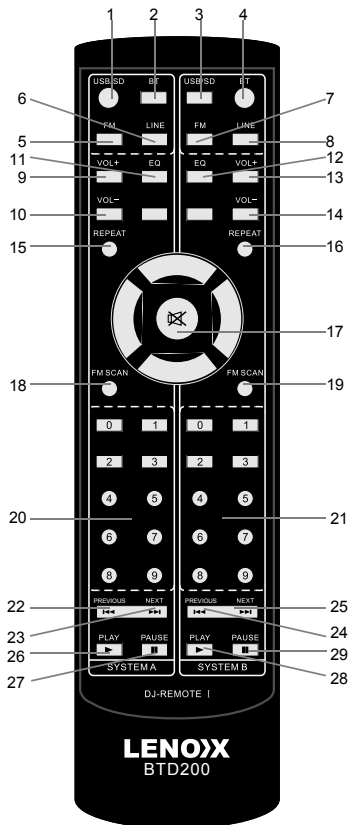

1. A System USB/SD card input button
2. A System BT input button
3. B System USB/SD card input button
4. B System BT input button
5. A System FM input button
6. A System LINE input button
7. B System FM input button
8. B System LINE input button
9. A System volume increase
10. A System volume decrease
11. A System Equalizer
12. B System Equalizer
13. B System volume increase
14. B System volume decrease
15. A System play again
16. B System play again
17. Mute volume
18. A System auto scan for channels
19. B System auto scan for channels
20. A System USB/SD card song select
21. B System USB/SD card song select
22. A System previous song
23. A System next song
24. B System previous song
25. B System next song
26. A System play
27. A System Pause
28. B System play
29. B System Pause

Dual Bluetooth Speaker



SYSTEM A

SYSTEM B

2 ways to enter or restart BT function

1. Press the "BT" input button on remote control system A
2. Press the "BT" button on top control panel system A

Speaker is in "Bluetooth" mode

Auto search and connect

Speaker will enter auto search; it will search for the last connected device.

Auto connect to the connected device

The unit will automatically connect to the last connected device that Bluetooth is open with in 20 metres in few seconds.

(Note: If device cannot be connected automatically, press the buttons "PLAY/PAUSE", "PREVIOUS", "NEXT" to activate Bluetooth and re-connect the device.)

When speaker cannot find the last connected device

Speaker can be connected with new device

Use the new device search and connect to **"BTD200 lenoxx A"**

Successful Connection

The BT connection is completed.



2 ways to enter or restart BT function

1. Press the "BT" input button on remote control system B
2. Press the "BT" button on top control panel system B

Speaker is in "Bluetooth" mode

Auto search and connect

Speaker will enter auto search; it will search for the last connected device.

Auto connect to the connected device

The unit will automatically connect to the last connected device that Bluetooth is open with in 20 metres in few seconds.

(Note: If device cannot be connected automatically, press the buttons "PLAY/PAUSE", "PREVIOUS", "NEXT" to activate Bluetooth and re-connect the device.)

When speaker cannot find the last connected device

Speaker can be connected with new device

Use the new device search and connect to **"BTD200 lenoxx B"**

Successful Connection

The BT connection is completed.





1-2: Two Handles (Pls refer to installation instruction on Page 7)

3-4: Two tweeters

5: 15 inch woofer with disco light

6-7: Two gas holes for air blow, please do not cover

8-11: Four wheels, the two wheels in front can be locked by pressing down the switch on wheels