

# Assembly instruction

Model no: YD1004





## Please read and retain these instructions for future reference.

The illustrations used in this manual are to illustrate the operation method and structure of the product. Where there is a small difference between the physical item and the illustrations, please take the physical as the standard.

#### **FEATURES:**

Safe & stable
Low centre of gravity
Durable material
Indoor or outdoor play
No batteries, gears or pedals

Age: 3+ years Weight limit: 25 Kg



#### **SAFETY INFO:**

- 1. When unpacking the ride on, properly dispose of all plastic wrappings.
- 2. Adult supervision is required at all times.
- 3. Failure to follow the instructions may affect the safety of children.
- 4. This product is designed for use by children from 3 years to 6 years of age.
- 5. Protective equipment such as a helmet is recommended (protective equipment is not included).
- 6. Assembly must be completed by an adult.
- 7. Each time before use, ensure that all removeable parts and fasteners are firmly in place.
- 8. Only one child can use this at a time.
- 9. A child who is riding is not to be pushed.
- 10.Do not allow a child to stand on the ride-on.
- 11.Do not let children ride in the street, anywhere dangerous including stairs, doorsteps, steep slopes, streets/roads, vehicle traffic, next to bodies of water and away from other obstacles. Use during day light hours or in an illuminated area is advised to avoid accidents in the dark.
- 12.Do not drive on long or wet grass, mud, soft ground, gravel or sand.
- 13.It is not recommended for use on wooden floors. The wheels may damage some floors.
- 14. The maximum carrying capacity is 40kg.

### **PARTS:**



## **ASSEMBLY:**

