

*Healthy Choice*<sup>™</sup>  
MMX1200

# POWERFUL MIX MASTER

---

**1200w POWER / 5L BOWL**



Model: MMX1200 / MMX1200R  
Batch: PR4183

This appliance is intended for household use only.  
Please read and retain these instructions for future reference.

The illustrations used in the manual are to illustrate the operation method and structure of the product. Where there is a small difference between the physical item and the illustrations, please take the physical as the standard.

### **IMPORTANT SAFEGUARDS:**

**When using an appliance, basic safety precautions should always be followed, including the following:**

1. Read instructions carefully before use.
2. Remove and safely disregard any packaging material and labels before using this product for the first time. Ensure children and babies do not play with plastic bags or any packaging materials.
3. Before use, check that your local voltage corresponds with the specifications shown on the appliance nameplate located under the appliance.
4. Always operate the appliance on a horizontal surface which is level, stable and non-combustible. Do not operate the appliance on or near combustible materials such as tablecloths or curtains.
5. Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
6. Never connect this appliance to an external timer or separate remote-control system.
7. Never use this appliance with an extension cord or power board. Ensure it is plugged into a dedicated power point and without any other appliances on the same outlet.
8. Do not turn on the power until the appliance and parts are in place as required. Make sure the door is closed before plugging in and switching on the power.
9. To protect against electric shock, do not immerse the cord, plug, or appliance in water or any other liquid. Do not expose the appliance to dripping or splashing and ensure that no objects filled with liquids such as vases are placed on the appliance. Do not put any water or other liquid into the main housing of the appliance through the vents (if relevant). Do not rinse it under the tap.
10. Do not touch the appliance, power cord or power plug with wet hands.
11. Unplug from the outlet when not in use and before cleaning. Allow the appliance to cool down (if relevant) before putting on or taking off the parts, and before cleaning.
12. The appliance does not contain any serviceable parts inside. Do not attempt to open and repair the unit yourself. All components should only be serviced by a qualified technician.

13. Do not use the appliance if the plug, power cable or unit itself are damaged. If the power cord is damaged, you must have it replaced at a service centre with qualified persons in order to avoid a hazard.

14. Do not use the appliance for anything other than the intended use. It is for household use only. It is not to be used outdoors or for commercial purposes.

15. Close supervision is necessary when any appliance is used near children. Keep the appliance and power cord out of reach of children when it is in operation or during the cooling process.

16. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

17. This appliance should be operated on a separate electrical power point from other operating appliances. If the power point is overloaded with other appliances, this unit may not work properly.

18. Leave enough open space from other objects while in use. Do not block air intakes or exhausts (if relevant).

19. Do not place the appliance against a wall or against other appliances. Leave at least 5 inches of free space on the back and sides and above the appliance. Do not place anything on top of the appliance.

20. Do not let the cord hang over the edge of the table or counter.

21. Do not unplug the appliance by pulling on the cord.

22. Unplug the appliance when not in use and before cleaning.

23. This appliance is not designed to be used by people (including children) with a physical, sensory or mental impairment, or people without knowledge or experience, unless they are supervised or given prior instructions concerning the use of the appliance by someone responsible for their safety. Children must be supervised to ensure that they do not play with the appliance.

24. Avoid contact with moving parts. Keep hands and utensils away from moving parts to reduce the risk of severe injury to yourself or damage to the unit.

25. Ensure that an attachment has been securely locked in place before operating the appliance.

26. The use of attachments not recommended or sold by the manufacturer may cause fire, electrical shock or injury.

 
27. Turn the appliance off before changing an attachment.

28. Do not leave the appliance operating while unattended.

**SHORT CORD INSTRUCTIONS:**

Do not use with an extension cord. A short power supply cord is provided to reduce the risks resulting from being entangled in or tripping over a long cord.

**PRODUCT COMPONENTS:**

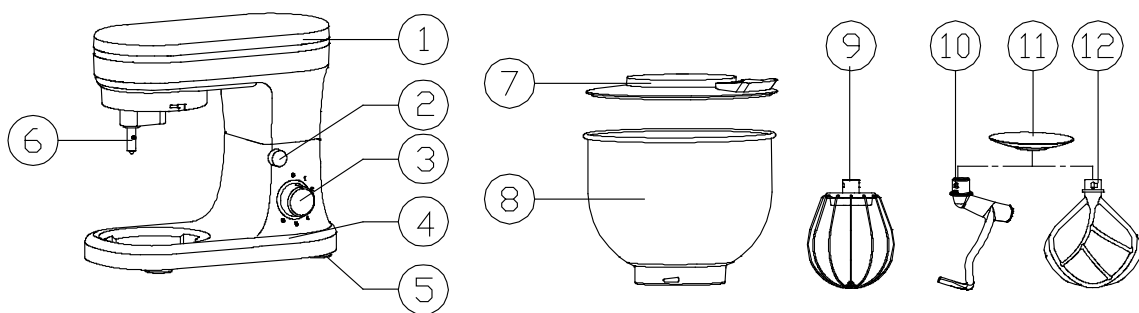

1.	Swivel arm	2.	Release button
3.	Speed control knob	4.	Body
5.	Foot pad	6.	Spindle
7.	Bowl cover (lid)	8.	Bowl
9.	Wire whisk	10.	Dough hook
11.	Splashguard	12.	Paddle beater


**CONTROL DIAL:**

 0: Stop




1 – 6: Operating speeds

1: Minimum speed, slow

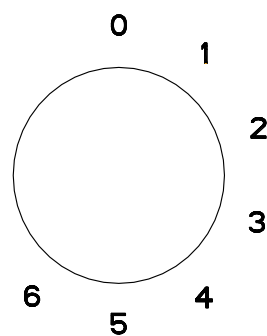




6: Maximum speed, fast




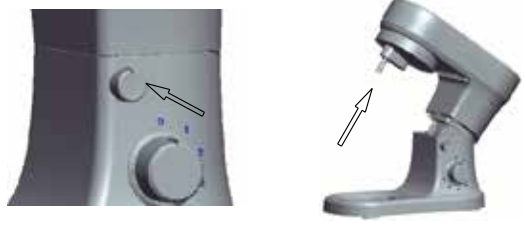 
**SETTING SPEED:**


Attachment	Picture	Speed setting	Time	Max Capacity
Dough Hook		1, 2, 4	30 sec at speed 1, 30 sec at speed 2, 4 min at speed 4. Max running time: 5 minutes	700 g flour and 350ml water
Paddle beater		4-5	Max running time: 10 min	
Wire whisk		6	Max running time: 10 min	


**OPERATING INSTRUCTIONS:**


Position	Attachment		
			
	When the head of the mixer is in the upwards tilt position, an attachment can be added.		

1. 	1. Place the appliance on a flat surface, e.g. a kitchen counter, and ensure that it is standing firmly.
--	--

<p>2.</p> 	<p>1. Press release button (2) at the same time lift the swivel arm (1) with your other hand so that it locks into place with a click the swivel arm tilts up.</p>
---	--

<p>3.</p> 	<p>1. Fit the lid (7) onto the swivel arm and turn it slightly clockwise, so that it locks into position securely.</p>
---	--

<p>4.</p> 	<p>1. Place the food in the mixing bowl (8).</p> <p>2. Fit the mixing bowl in the recess on the motor house (4).</p> <p>3. Turn the mixing bowl slightly clockwise, so it locks into position.</p>
--	--

<p>5a.</p> 	<p>1. Put the splashguard (11) onto the dough hook (10) as shown in the picture. Turn and fix the hook. The splashguard can prevent the dough from climbing to the top of the hook.</p> <p>2. Fit the required attachment (11 with 10 or 12) onto the motor spindle (6) on the underside of the swivel arm.</p> <p>3.</p> <p>A. The dough hook (10) is used for heavy dough, minced meat or other demanding kneading jobs.</p> <p>B. The paddle beater (12) is used to mix lighter types of dough.</p> <p>C. The wire whisk (9) is used for whisking cream, egg whites, etc.</p>
--	--

5b.



4. Turn the attachment, so the pins on the spindle are aligned with the depressions on the attachments top edge. Press the attachment against the swivel arm and turn it anti-clockwise at the same time until the pins engage and the attachment locks into position securely. The attachment must not be loose, nor should you be able to pull it free.

6.



1. Press the release button and at the same time lower the swivel arm so that it locks into place with a click. The lid must fit tightly with the mixing bowl, otherwise it is fitted incorrectly. The appliance is now ready for use.

2. Plug the power cord into main power outlet.

3. Select the speed you want using (1-6). Speed 1 is the slowest and speed 6 is the fastest speed.

4. If you need to scrape inside the mixing bowl, wait until the attachment has stopped completely. Use the spatula, never use your fingers.

7.



1. Switch off the appliance by turning the speed control knob to 0 when you have finished mixing.

Switch off the appliance and unplug it before you change the attachments, or before you take the appliance apart or when not in use.

2. Press the release button and at the same time lift the swivel arm with your other hand so that it locks into place with a click.

The swivel arm tilts up.

8.



1. Detach the attachment by turning it clockwise.

2. Remove mixing bowl with prepared food anti-clockwise.

- Note: During kneading, some flour may be adhered on the inside of the mixing bowl, remove the bowl cover, and scrape the flour on the inside wall of bowl by using a spatula (not included) to obtain the best results.

Ensure the mixer speed is in the OFF position when this is done.

- When mixing food such as butter with egg or flour, pieces of vegetables and fruits, use the paddle beater attachment.

- When mixing liquid foods such as eggs, milk, water etc. use the wire whisk attachment. To whisk eggs, the suggested maximum amounts of eggs are 14 x regular size eggs. The suggested minimum amounts of eggs are 3 x regular size eggs.

- Caution: Before pressing down the release button (namely before lifting the head of mixer), make sure the paddle beater or wire whisk or dough hook rest on the 2 sides of the head of mixer, otherwise, when lifting the head of mixer, the paddle beater or wire whisk or dough hook will intervene the mixing bowl; if the paddle beater or wire whisk or dough hook is resting on the front of the head of mixer, turn on the speed selector again, let the mixer to rotate for a few seconds, then turn off the speed selector to stop the paddle beater or wire whisk or dough hook on the side of the head of the mixer.

#### **TIPS:**

1. For the best mixing results, cold ingredients such as eggs, milk and butter should be at room temperature.

2. To eliminate the possibility of shells or expired eggs being used in your recipe, break eggs into a separate container before adding them to the mixture.

3. Do not over beat your ingredients; mix/blend until recommended in your recipe. Fold dry ingredients until just combined. Using lower speeds allow the user more control.

4. Always start mixing at a lower speed and gradually increase to a higher speed if required.

#### **CLEANING AND MAINTENANCE:**

- Unplug the appliance and wait for it completely cool down before cleaning.

- Caution: the mixer cannot be immersed in water or other liquid.



- Wipe over the outside surface of the head and base with a dampened cloth and dry it with a soft dry cloth.
- Wipe any excess food particles from the power cord.
- Remove the attachment, bowl cover and bowl from the mixer.
- Immerse the mixing bowl, splashguard, paddle beater, spatula, dough hook and wire whisk in warm soapy water and wash with a sponge for complete cleaning. Then rinse under running water and wipe dry. The parts are NOT DISHWASHER SAFE.
- Do not use any scouring pads, steel wool or any form of strong solvents or abrasive cleaning agents to clean the appliance as they may damage the outside surfaces of the appliance.

**TECHNICAL SPECIFICATIONS:**

Capacity of bowl	5 Litre	
Voltage	220 – 240V	
Hertz	50	
Max power	1200W	
Rated power	400W	
Running time	Dough Hook	Max running time: 5 minutes
	Paddle beater	Max running time: 10 minutes
	Wire whisk	Max running time: 10 minutes
Cool down time:	40 minutes	

**LENOXX**

[www.lenoxx.com.au](http://www.lenoxx.com.au)

 1300 666 848

 LenoxxElectronics

 LenoxxElectronics

 @LenoxxAustralia

# Healthy Choice™

---

*Dear Valued Customer,*

Thank you for purchasing the MMX1200, Powerful Mix Master.

Your comments are important to us because they help us provide high quality, competitive and innovative products, just for you. If you are satisfied with your product, we kindly ask you to please take a moment to write a review on [www.productreview.com.au](http://www.productreview.com.au) and/or through the website where you have purchased your item.

If you have any questions concerning our products, please call our customer service department on **1300 666 848**. *Your feedback makes us better.*

Thank you for choosing Healthy Choice by Lenoxx.

# **LENOXX**

## **LENOXX ELECTRONICS AUSTRALIA PTY LTD**

Importers & Wholesalers of Electronics & Toys

6 Oban Court Laverton North Vic 3026

ABN: 97 844 321 851

Customer Service: 1300-666-848

Email Address: [Lenoxx@lenoxx.com.au](mailto:Lenoxx@lenoxx.com.au)

Web Site: [www.lenoxx.com.au](http://www.lenoxx.com.au)

### **ELECTRONICS GOODS WARRANTY**

WE WARRANT THIS PRODUCT TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE FOR A PERIOD OF 12 MONTHS AFTER DELIVERY TO THE ULTIMATE USER AND WE WILL REPAIR AT NO CHARGE OR REPLACE IT AT OUR OPTION SHOULD IT BECOME DEFECTIVE UNDER THIS WARRANTY PROVIDING YOU SUBMIT PROOF OF PURCHASE (ORIGINAL SALES RECEIPT) WHEN MAKING A REQUEST UNDER THIS WARRANTY. THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT, WHICH HAS BEEN SUBJECT TO MISUSE NEGLECT OR ACCIDENT. THE WARRANTY DOES NOT COVER: HANDLES, BATTERIES, ELECTRICAL CORDS, ANTENNAS, MICROPHONES, BROKEN CABINETS OR ANY OTHER ACCESSORIES USED IN CONNECTION WITH THE PRODUCT. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS (AUSTRALIA) PTY LTD BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

**IMPORTANT MESSAGE:** BEFORE SENDING YOUR UNIT TO LENOXX FOR REPAIR YOU MUST SUPPLY PROOF OF PURCHASE (Original Sales Receipt) TO VALIDATE YOUR WARRANTY.

THIS WARRANTY IS IN ADDITION TO OTHER RIGHTS AND REMEDIES OF THE CONSUMER UNDER A LAW IN RELATION TO THE GOODS OR SERVICES TO WHICH THE WARRANTY RELATES.

*"Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure".*

**For warranty registration please visit our website  
[www.lenoxx.com.au](http://www.lenoxx.com.au)**

**Service Direct Line (Australia only): 1300 - 666 - 848**

MODEL NO:

BATCH NO: